



HP Envy m6-k022dx RAM Replacement

Replace your ram stick to replace a damaged stick, or to upgrade your laptop's ram for increased processing speed.

Written By: Anthony Stubbs



INTRODUCTION

Replace your random access memory (RAM) stick to increase your computer's ability to do everyday tasks, such loading applications and increasing the realism in video games.



TOOLS:

- [Philips J0 Head](#) (1)



PARTS:

- [6GB DDR3L SDRAM](#) (2)

Step 1 — Lower Case




- There are 12 phillips head screws which need to be unscrewed before removing the backplate of the laptop.

Step 2



- Next, use a size PH1 Philips head screw driver to remove the screws.

Step 3

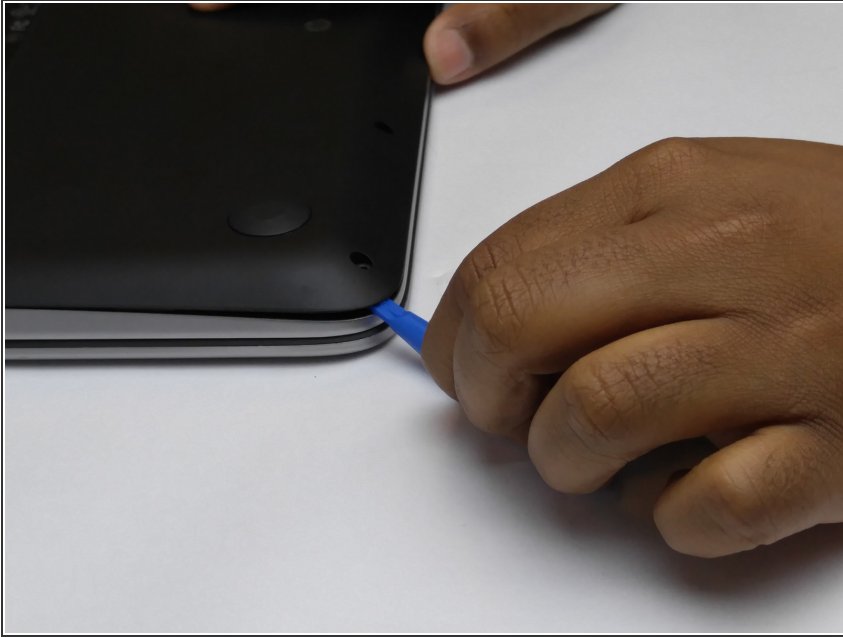


- Then, use a prying tool to help uncouple the backplate.

Step 4




- Finally, use both hands to lift up and take off the back plate of the computer.

Step 5 — RAM

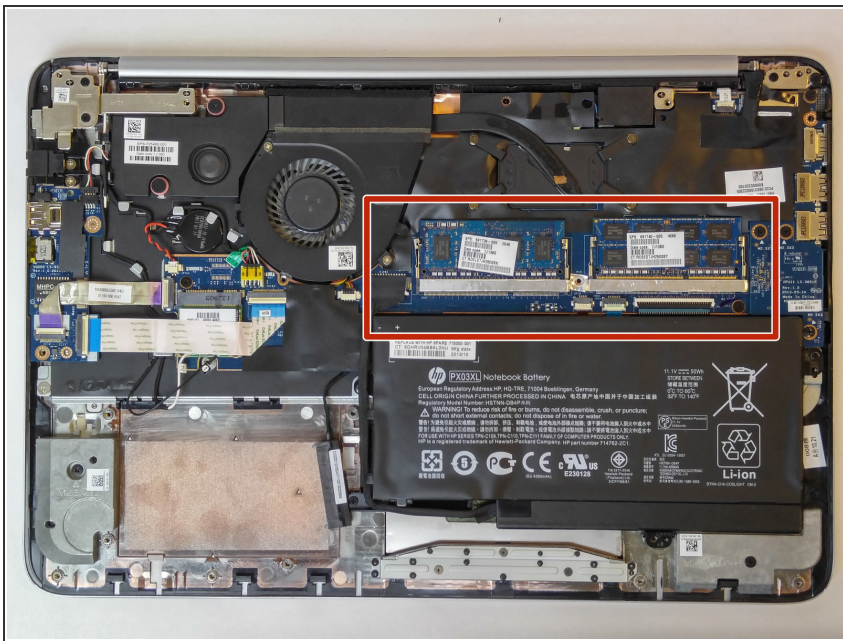

- The RAM sticks are located in the right upper corner of the laptop of the laptop.

Step 6

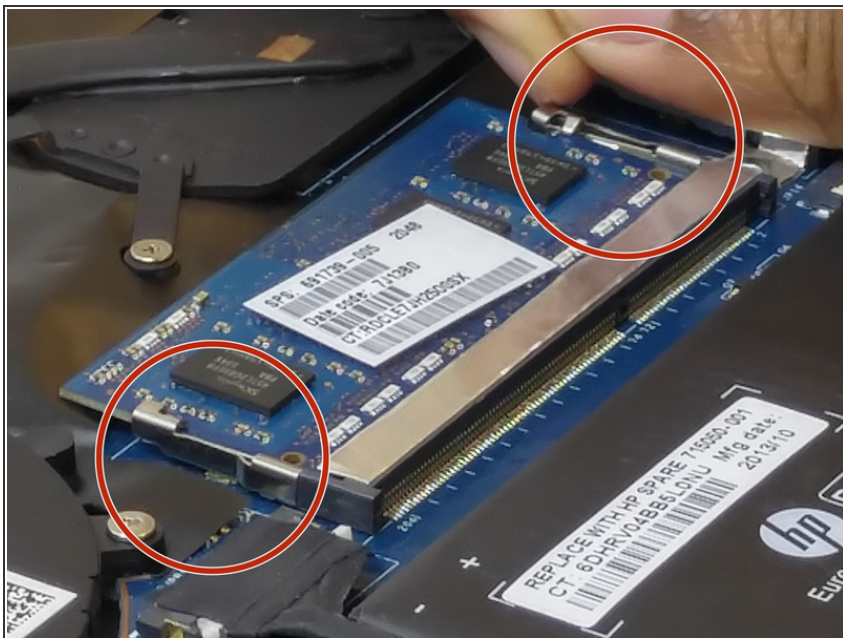

- There are two clips holding each RAM stick in place; one on each side of each stick.
- Gently pull each clips outwards, away from the RAM sticks. They will easily unclip from the RAM.

Step 7



- Grab the top of the RAM stick and pull directly up, towards the outer edge of the laptop.
- The RAM sticks will slide out from their slots relatively easily. They are now ready to be replaced.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 12:15:08 PM.